

OWNER'S GUIDE



Dear customer

Congratulations, and thank you for purchasing Voltsmile products!

Your decision will greatly help greening our environment and energy structures while saving on your energy bill and saying goodbye to blackouts.

Every Voltsmile product receives thorough tests and inspections before leaving our factory to ensure all our products are maintenance-free and reliable through decades of their lifetime.

Disappearing in your life while saving money, unnoticeable while making sure your home stay connected.



01. Safety

03. Specification

05.Installation

07. Indication

02. Interface


04. Packing list

06. DIP and pinout


08. Remark

When using electrical appliances, basic safety precautions should always be followed, include followings:



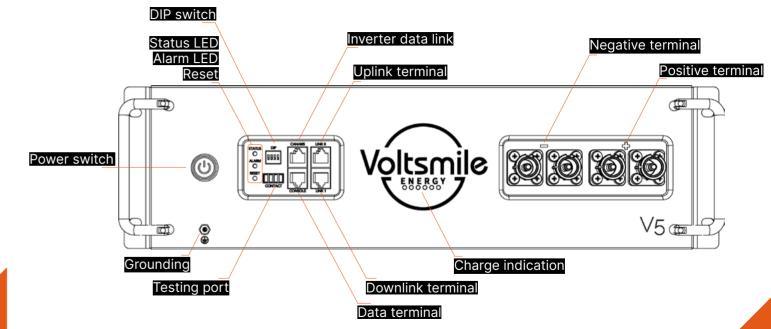

1

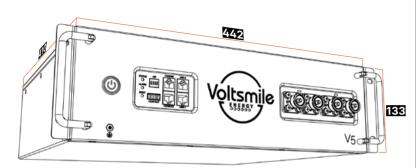

RoHS UK C E TUNNORD

Voltage(V): 48 Capacity (Ah): 50 Weight (Kg): 26

Discharge voltage (V): **44.5 ~ 53.5** Charge voltage (V): **52.5 ~ 53.5**

Charge current(A): **50** max
Discharge Current (A): **50** max

Peak charge/discharge current (A): **100** @ 10sec

Depth of discharge: **95**%

Communication: RS485 / RS232 / CAN

Charge temperature: 0°C ~ 50°C / 23°F ~ 122°F
Discharge temperature: -20°C ~ 50°C / -4°F ~ 122°F

Shelf temperature: -20°C ~ 60°C / -4°F ~ 140°F

Humidity: 5% ~ 95% (RH)

Protection rating: I
IP rating: IP20

Altitude: <4500M

Designed life: 10 years+

Life cycle: **6000+**



Warning:

Installation and maintenance should only be carried out by trained professionals. We do not undertake any consequences or related responsibility because of violation of safety operation or violation of design, production and equipment safety standards.

1. After unpacking, please check the product and packing list first. If the product is damaged or missing parts, please get in touch with your local dealer.

Packing list:


-- ----


Voltsmile V5
Positive power connecter
Negative power connecter
Data link cable
Grounding wire
Grounding screw
Contact terminal
User manual
warranty card








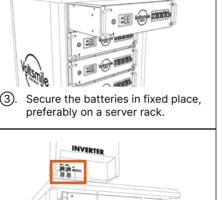


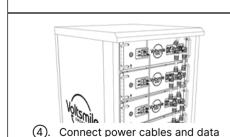


 (1). Check the battery.



off before install.

 

 

Connect to interver's battery terminals and data port.

Battery position:































I	ON		DIP	
16.	1	2	3	4

Cable pinout:

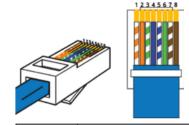

Pin	Colour	Defenition	
1	Orange & White	NC	
2	Orange	NC	
3	Green & White	NC	
4	Blue	CANH	
5	Blue & White	CANL	
6	Green	CAN_GND	
7	Brown & White	485_A	
8	Brown	485_B	

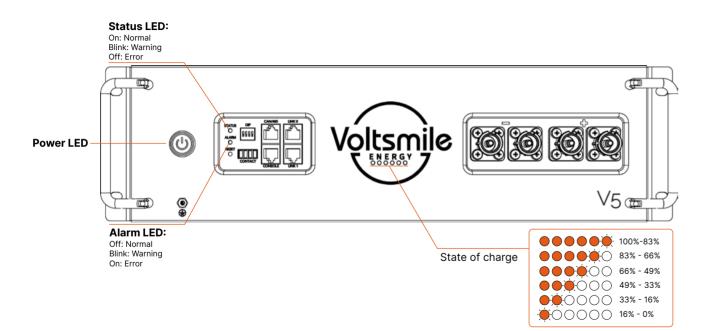





In case a battery (normal condition or damaged) needs disposal or needs recycling, it shall follow the local recycling regulation (i.e. Regulation (EC) Number 1013/2006 among European Union) to process and use the best available measures to achieve relevant recycling efficiency.

- 1. It is required to charge the battery at least once every six months. For this charge, maintenance ensures the SOC is higher than 90%.
- 2. The connection of the power connector, grounding point, power cable and screw are suggested to be checked yearly. Ensure there is no loose, broken, or corrosion at the connection point. Check the installation environment, such as dust, water, insect and more, to ensure it is suitable for the IP20 battery system.
- 3. If the battery is stored for a long time, it must charge every six months, and the SOC should be higher than 90%.

5

2022 VOLTSMILE CO.,LTD

